


## **How to Measure Floor Registers**

All homes that have down flow furnaces, meaning the ducts are below the floor, have floor registers or vents that may need to be replaced over time.

<u>Floor registers</u> come in brown and white colors and have various sizes you can choose from. It is important that you measure the floor register before purchasing one to avoid mistakes. Remember, there are NO "standard" registers.

There are 2 correct ways to measure a floor register - one is to measure the "rough opening" on the duct which is the hole on the floor where the vent will be installed. The second way to measure is to take out the floor register and measure the back that goes inside the duct as shown on the pictures below (4x10in).

The most common sizes for floor registers are:

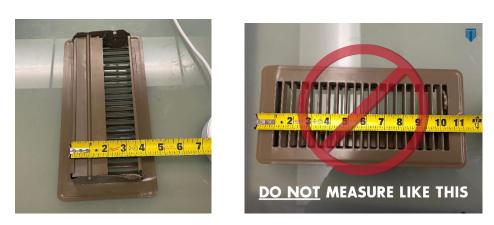

4 x 10 4 x 8 4 x 12 6 x 6

NOTE: These registers are NOT for ceiling ventilation.