

## MEASURING DOORS

### TO DETERMINE THE SIZE OF THE DOOR:


Measure the rough opening of the door (the hole in the wall if the door assembly is not present) carefully. If you can't measure the rough opening because trim is in the way, measure the door slab and we will know what you need. When you give door dimensions to your Capitol Salesperson, say width first, then height. Tell the Salesperson which method you used to measure - if you measured the door itself or the rough opening. **We do not accept returns on special order doors.**

### TO DETERMINE LEFT OR RIGHT HAND SWING:


Looking from the outside in, the side the hinges are on are the same as the swing of the door. If the hinges are on the left looking from the outside in, you need a left swing door. If the hinges are on the right looking from the outside in, you need a right swing door.

Note: Door jambs come in 4" or 6". Be sure to measure the door jamb and let us know when ordering your door.


Also note combination doors may have an entry door that has a different right/left swing than the storm door. Use the same method as the diagram on the right to determine which is which.

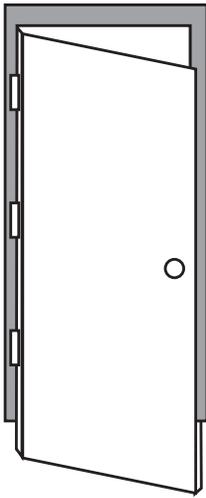


Left swing.  
(View from outside)

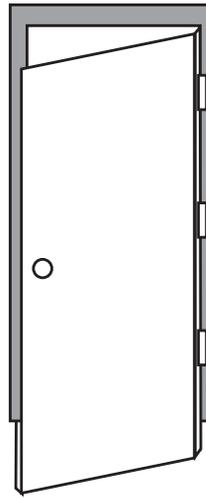


Right swing.  
(View from outside)

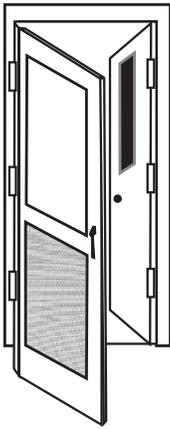


Left swing storm door with right swing entry door.  
(View from outside)

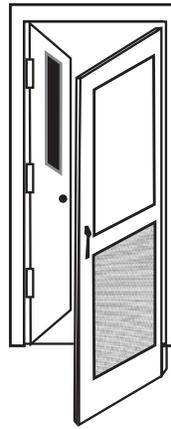



Right swing storm door with left swing entry door.  
(View from outside)

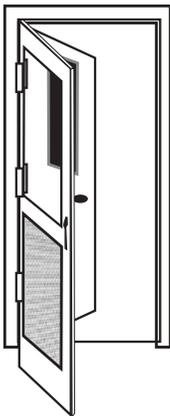


Left swing storm door with left swing entry door.  
(View from outside)

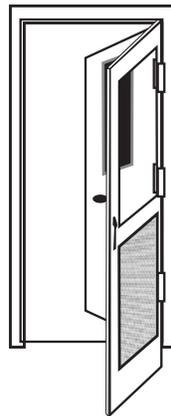

Right swing storm door with right swing entry door.  
(View from outside)

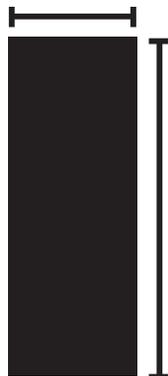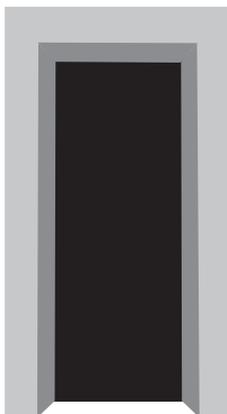

Rough opening.

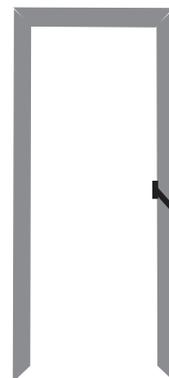

Door jamb.