

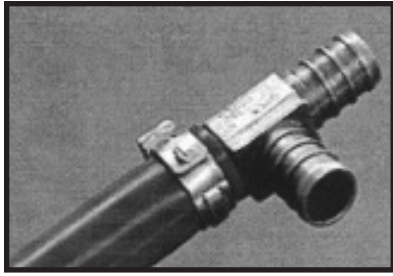



REMOVING AN OETIKER CLAMP

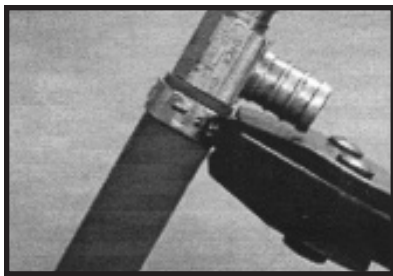

Place a flathead screwdriver under clamp tab and pry up to unlock.

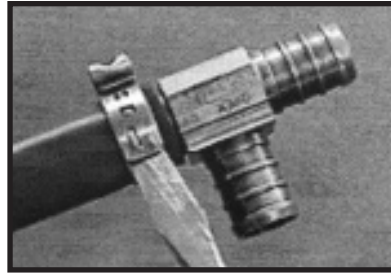



Use the ratchet tool to grasp tab. Pull firmly. The clamp should release.

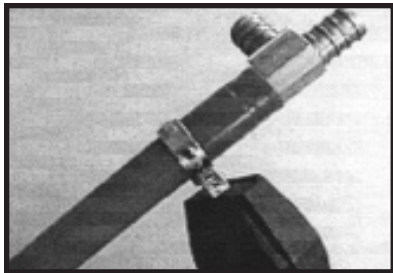



To remove the fittings, apply heat to the PEX tubing using a heat gun or hair dryer. Pull the fitting loose. Cut away the section of tubing that was previously clamped prior to continuing the installation.

CONNECTING AN OETIKER CLAMP


The Ratchet Tool for Oetiker Clamps connects 3/8", 1/2", 3/4" and 1" PEX tubing.

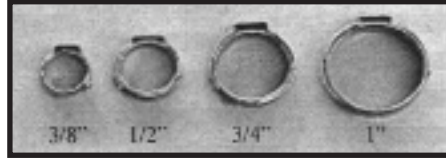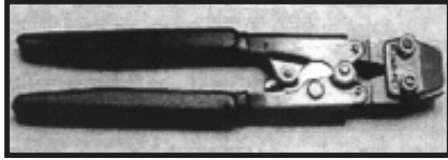

TO CONNECT AN OETIKER CLAMP

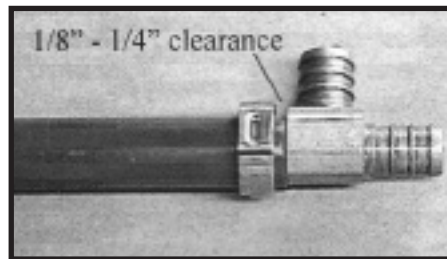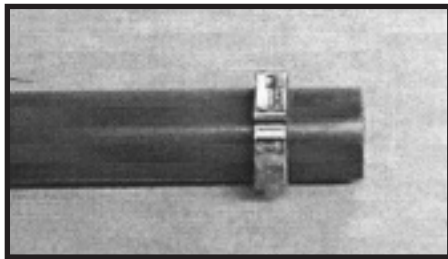

Cut tubing squarely. Slide clamp over tubing. Inswert tubing into fitting. Allow 1/8" to 1/4" clearance between fitting and clamp.

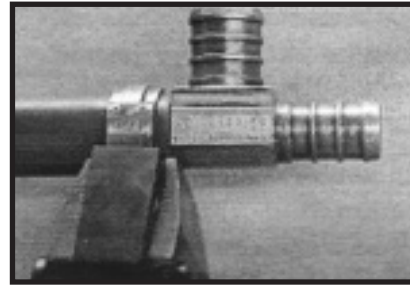


Grasp clamp with tool head and squeeze handles together.



Ratchet tool will not release until clamp is properly closed.



Release handle. Disengage from clamp.

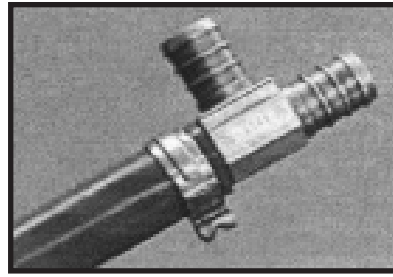

Clamp connection completed.